
T-Box User's manual



EN



Contents :

1. Setup	p3
2. Connection	p5
3. Menu	p6
4. Configuration	p9


Setup :

The T-Box is mounted on your spreader using the M3 screws supplied with the spreader.

Two lengths are supplied, the 3 long screws are used in the plastic housing.

***The tank of your spreader is pre-drilled to accommodate the T-Box, simply enlarge the 4 central holes of the tank to 3 / 3.5mm
(see diagram page 4)***

The socket for the T-Box battery must be on the screen side of the T-Drop.

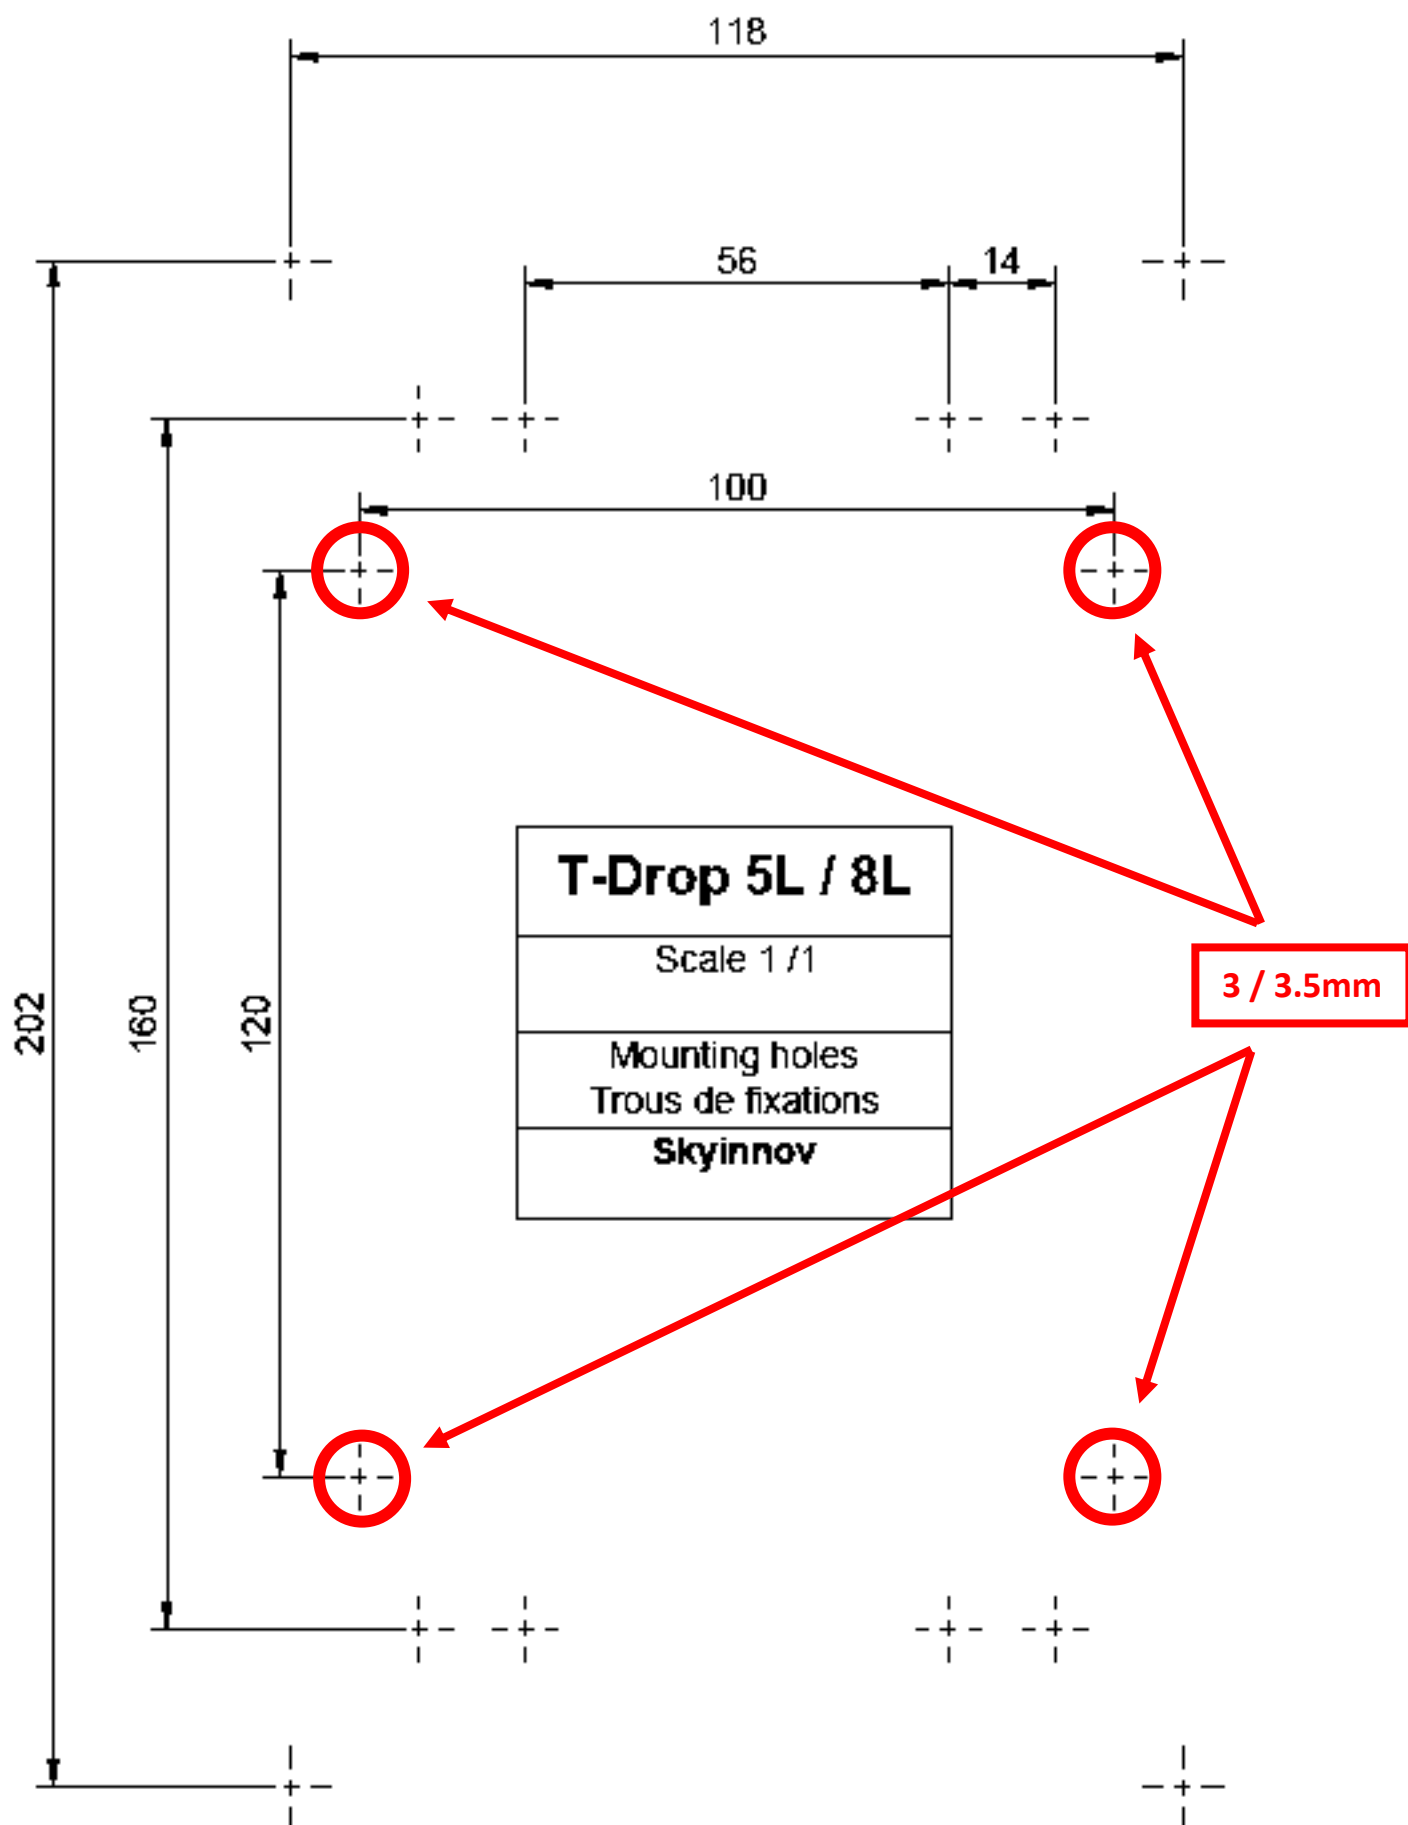

Connection :

- - Connect the spreader plug to the T-Box.
- For the power supply of the T-Box you have two options:
 - Connect a 5V power supply (2amps mini) to the "5V In" input which is located next to the spreader's socket.
Polarity: - + -
 - Supply the T-Box with a 2S battery via the XT30 socket
(Recommended battery: 2S li-ion 4800Mah)
In this case, you will have to use the power button to switch on the T-Box.

**The T-Box remote control is charged via the micro usb plug.
A red light indicates charging and goes out when charging is complete.**


The battery of the remote control discharges automatically when not in use, so we advise you to recharge the remote control just before use.

Menu :

Main page :

When you start your T-Box remote control, the screen displays the Skyinnov logo for a few seconds and then you arrive on the main page:

- Long press Down button=> On / Off
(the remote control cannot be turned off if the spreader is running)
- Long press right button=> next page
Short press right button=> stop spreader
- Long press left button => previous page
Short press left button=> spreader on

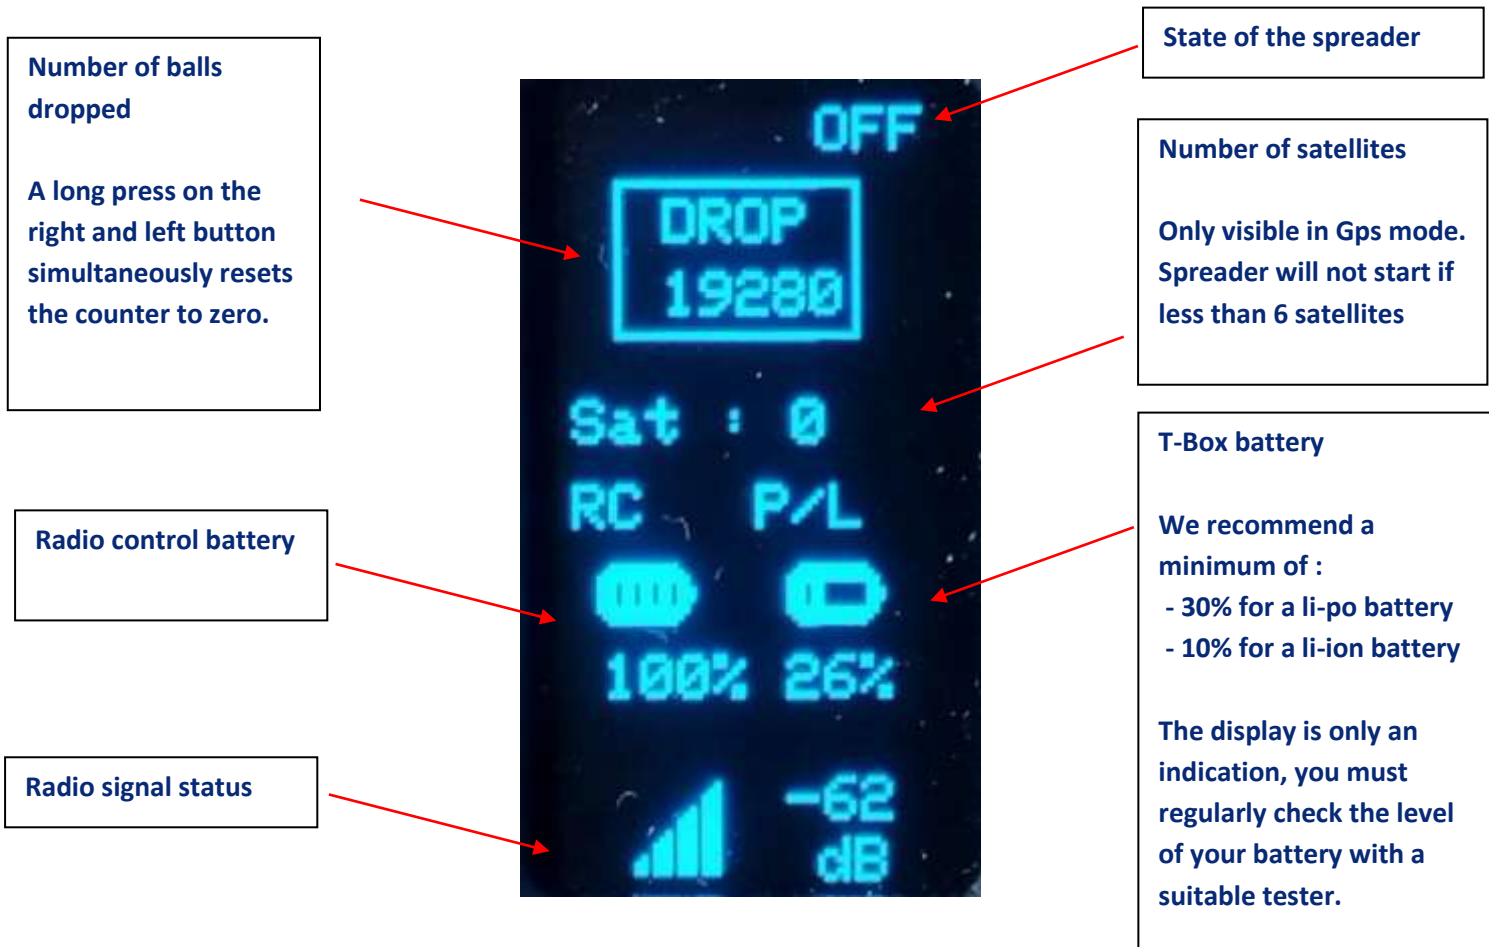

GPS page :

- Long press Down button=> On / Off
- Long press right button=> next page
Short press right button=> next value
- Long press left button => previous page
Short press left button=> previous value

Available settings:

- 1 ball every 5 metres
- 1 ball every 10 metres
- 1 ball every 15 metres
- 1 ball every 20 metres



Timer page :

- Long press Down button=> On / Off
- Long press right button=> next page
Short press right button=> next value
- Long press left button => previous page
Short press left button=> previous value

Available settings:

- 1 ball every 0.5 second
- 1 ball every 1 second
- 1 ball every 2 seconds
- 1 ball every 3 seconds



Configuration :

To work with the T-Box, your T-Drop spreader must follow this configuration:

ARM : off

DROP mode : I/O